


How to add reading coil to SVG 149



1.

Use pliers to remove cable ties on blue terminal

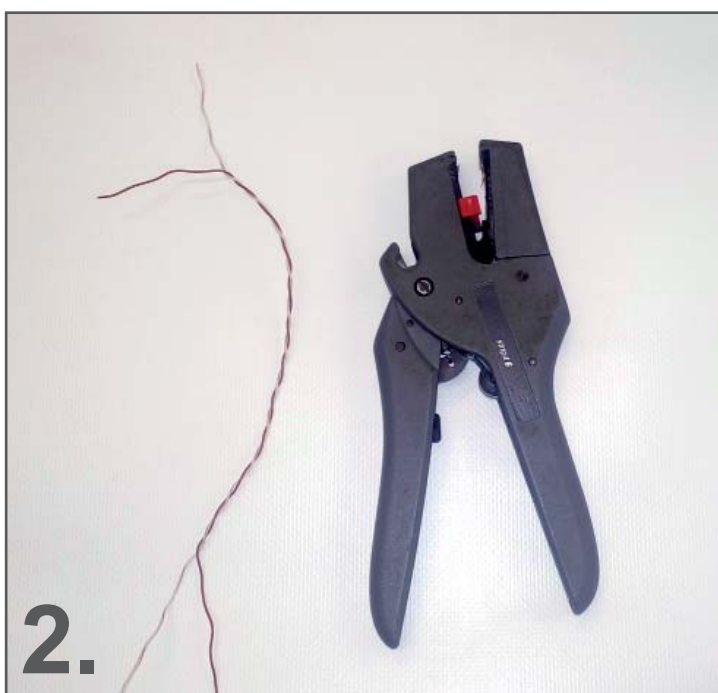


2.

Prepare 2x gold pin, 2x silver pin, 2x cable and crimping tool





What you need

- Crimping tool
- add-on cable SVG 149
- Reading coil
- Gold pin 2x into reading coil (bigger pin)
- Silver pin 2x into terminal (smaller pin)
- Cable 0,25mm2
- Pliers

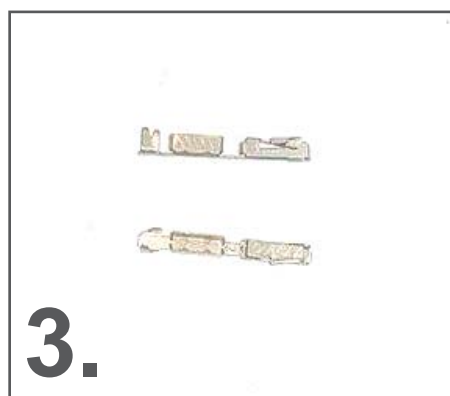


3.

Use crimping tool to mount pins on cable

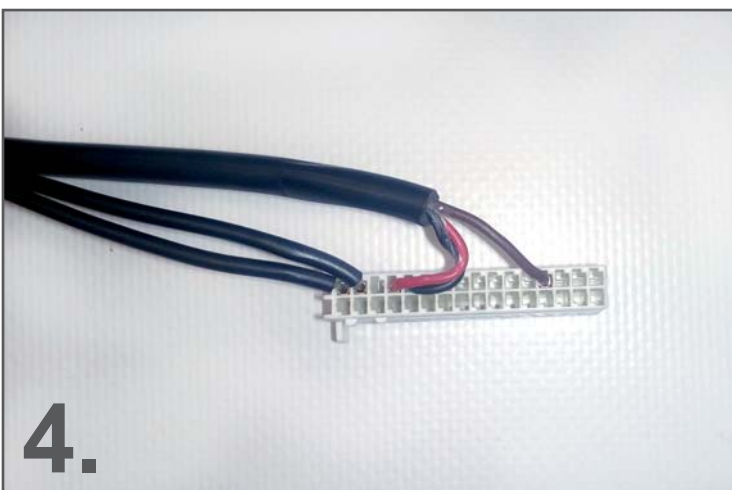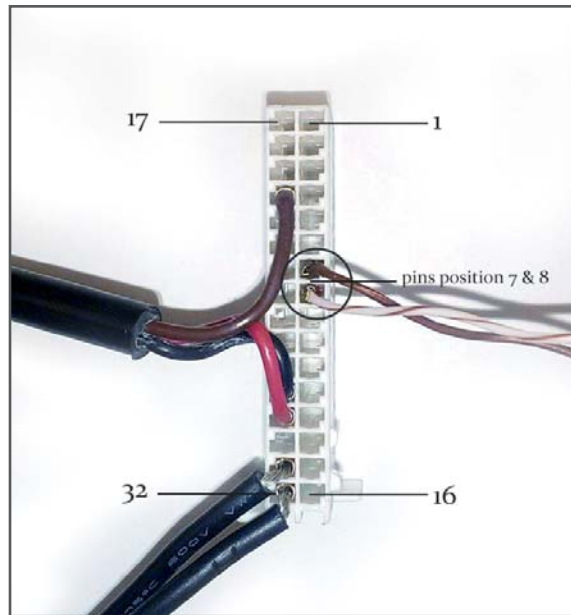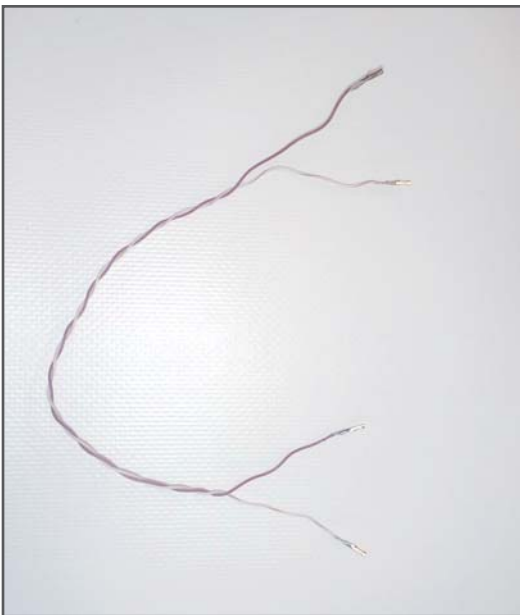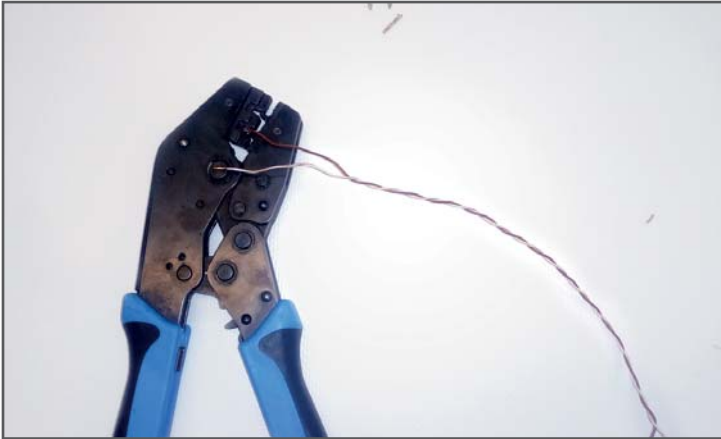


On 32 pin terminal connect bigger silver pins on position 7 and 8. You can commute this two cables.

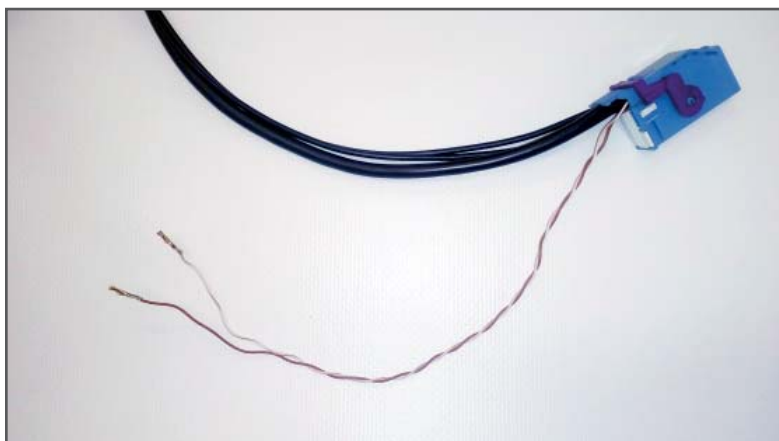

Connect two gold pins into reading coil. You can commute them.

Reading coil can be used to reading of key transponder and to key learning on table. For example you do not need to put in dashboard into car to try key learning after solving of all key lost situation. You can try it first on table.

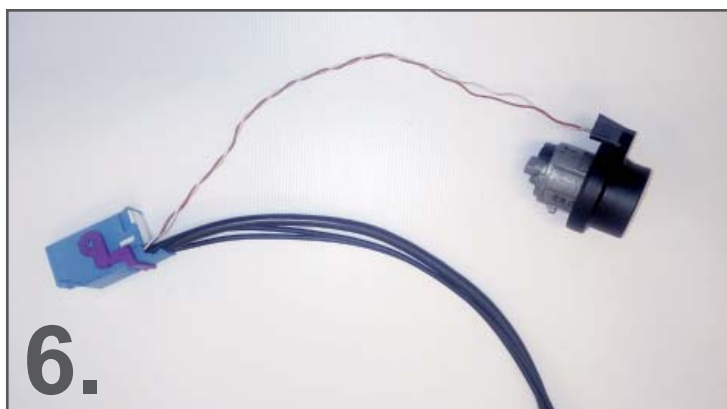

Return back cover and fix it with cable ties

